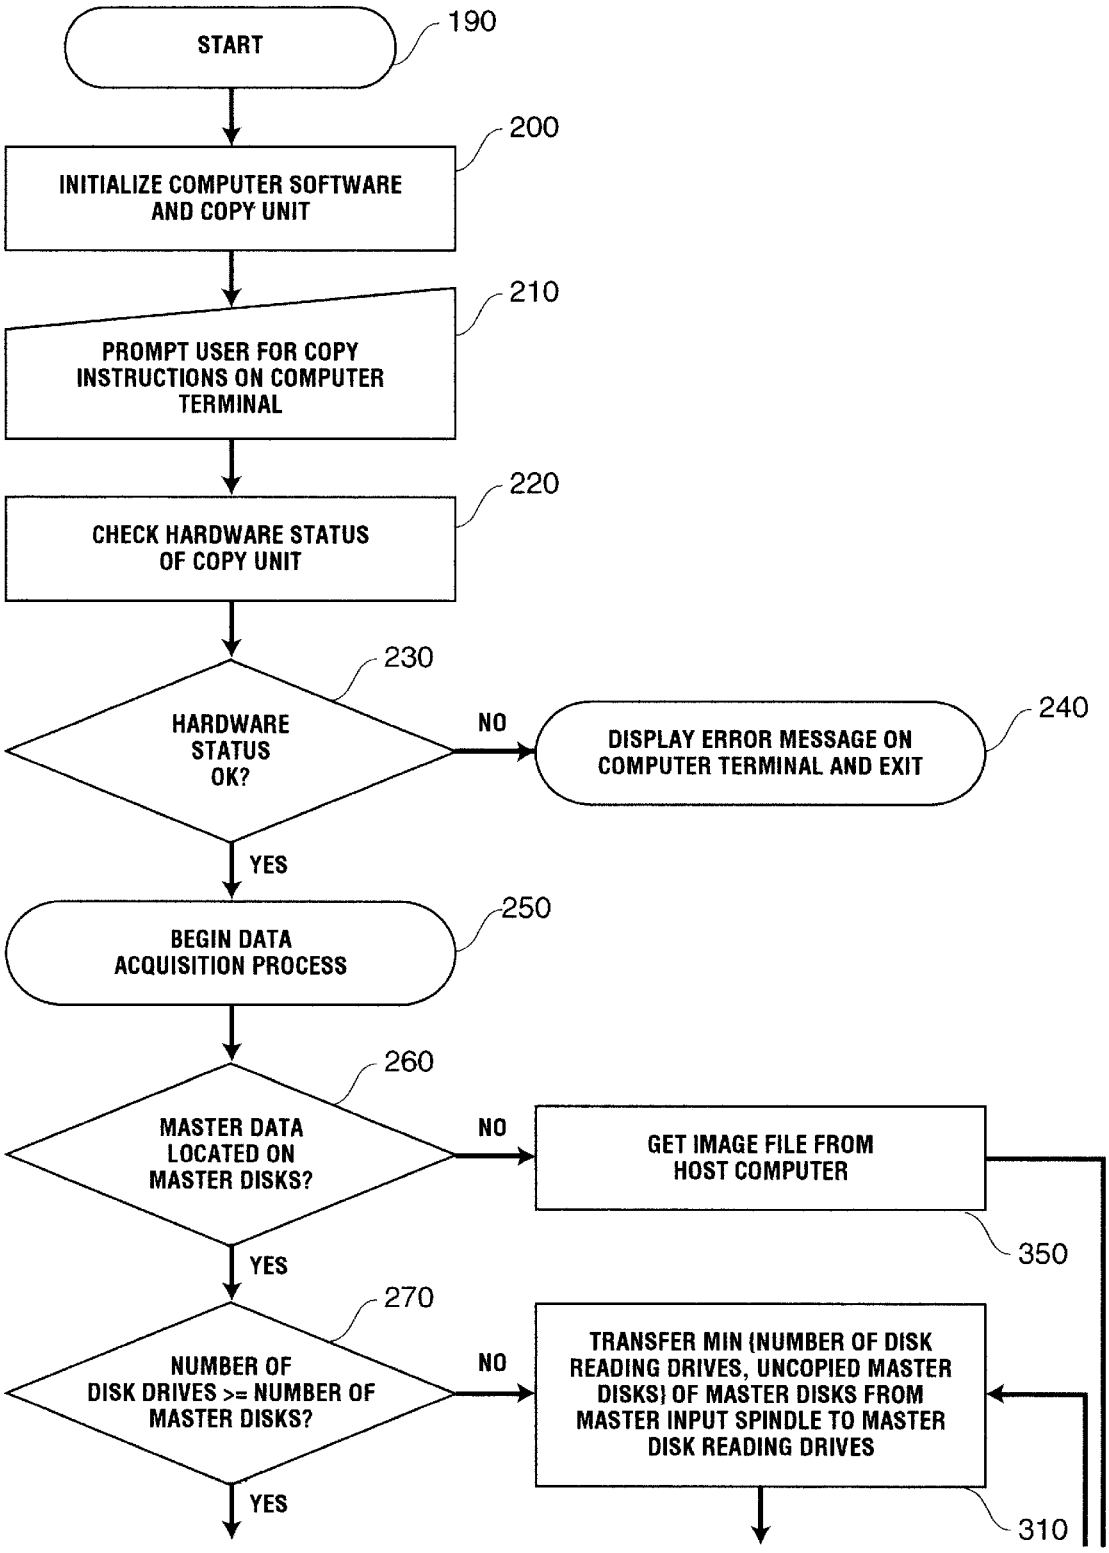
START
190
INITIALIZE COMPUTER SOFTWARE AND COPY UNIT
200
PROMPT USER FOR COPY INSTRUCTIONS ON COMPUTER TERMINAL
210
CHECK HARDWARE STATUS OF COPY UNIT
220
HARDWARE STATUS OK?
230
NO
DISPLAY ERROR MESSAGE ON COMPUTER TERMINAL AND EXIT
240
YES
BEGIN DATA ACQUISITION PROCESS
250
MASTER DATA LOCATED ON MASTER DISKS?
260
NO
GET IMAGE FILE FROM HOST COMPUTER
350
YES
NUMBER OF DISK DRIVES >= NUMBER OF MASTER DISKS?
270
NO
TRANSFER MIN (NUMBER OF DISK READING DRIVES, UNCOPIED MASTER DISKS) OF MASTER DISKS FROM MASTER INPUT SPINDLE TO MASTER DISK READING DRIVES
310
YES

FIG. 2A