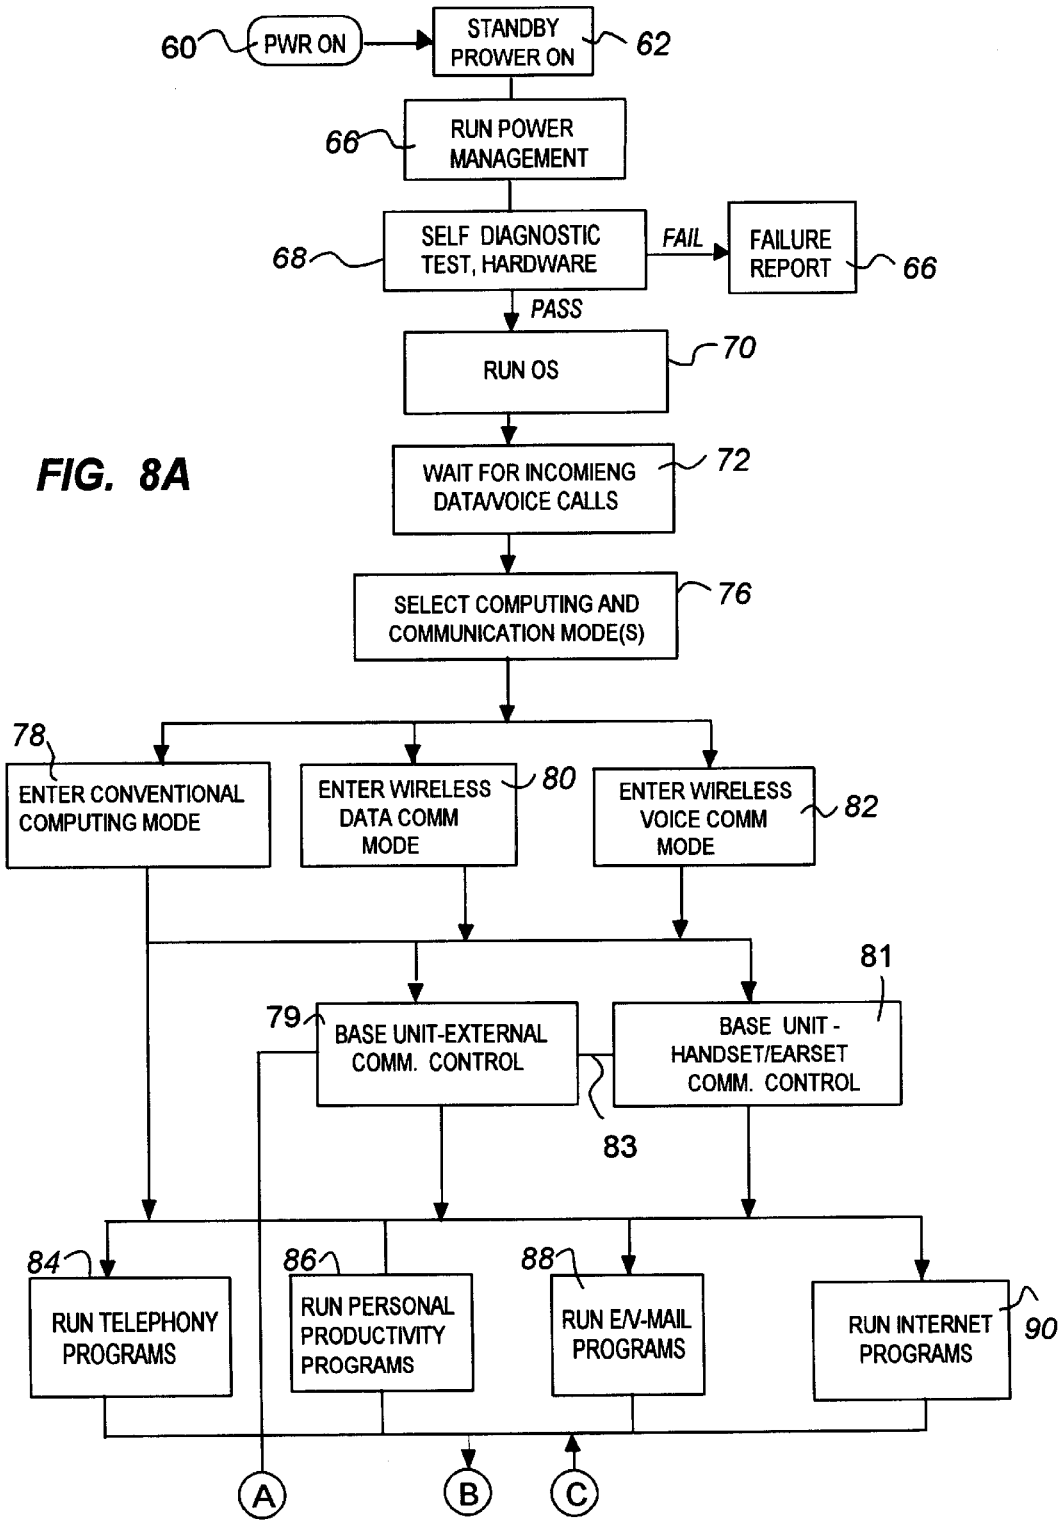
60
PWR ON
STANDBY PROWER ON
62
66
RUN POWER MANAGEMENT
68
SELF DIAGNOSTIC TEST, HARDWARE
FAIL
FAILURE REPORT
66
PASS
RUN OS
70
WAIT FOR INCOMIENG DATA/VOICE CALLS
72
SELECT COMPUTING AND COMMUNICATION MODE(S)
76
78
ENTER CONVENTIONAL COMPUTING MODE
ENTER WIRELESS DATA COMM MODE
80
ENTER WIRELESS VOICE COMM MODE
82
81
79
BASE UNIT-EXTERNAL COMM. CONTROL
BASE UNIT - HANDSET/EARSET COMM. CONTROL
83
84
RUN TELEPHONY PROGRAMS
86
RUN PERSONAL PRODUCTIVITY PROGRAMS
88
RUN E/V-MAIL PROGRAMS
RUN INTERNET PROGRAMS
90
A
B
C

FIG. 8A