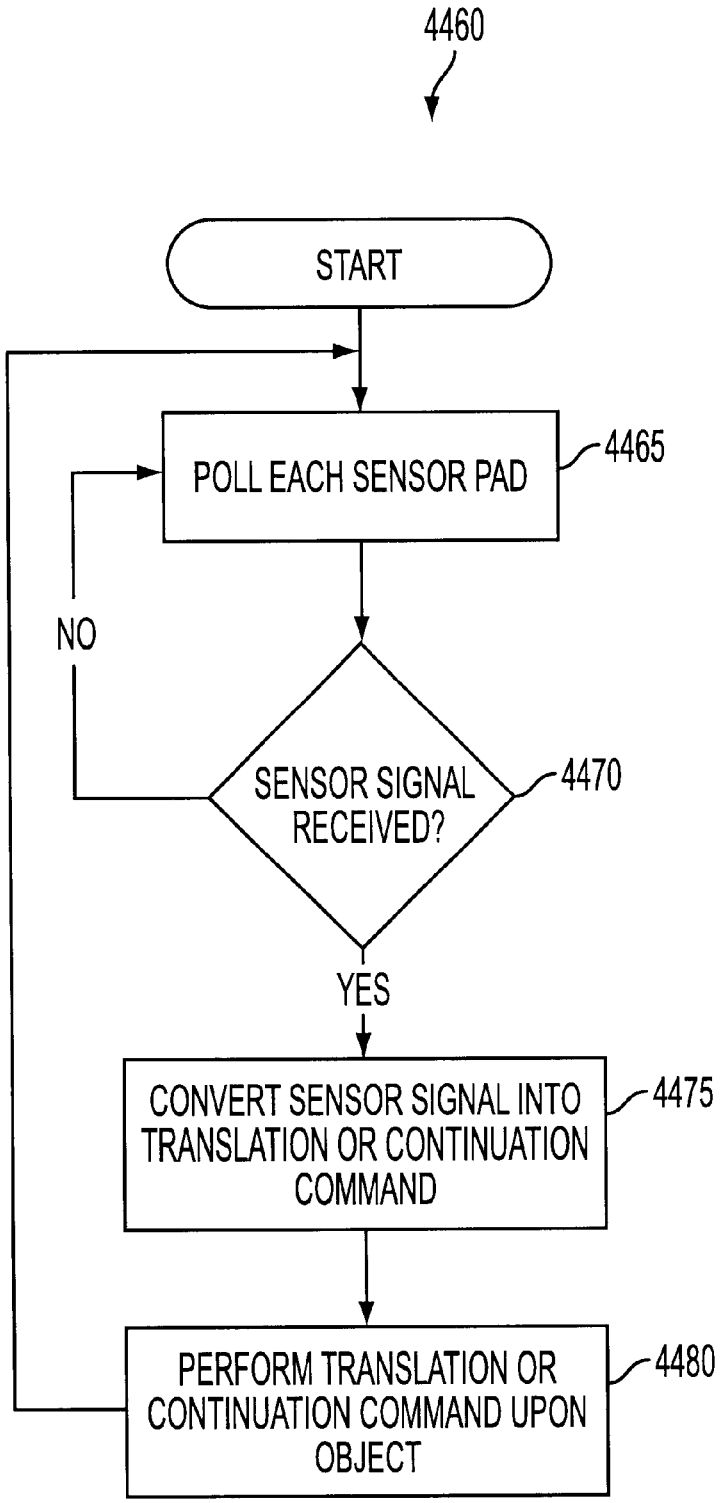
4460
START
POLL EACH SENSOR PAD
4465
NO
SENSOR SIGNAL RECEIVED?
4470
YES
CONVERT SENSOR SIGNAL INTO TRANSLATION OR CONTINUATION COMMAND
4475
PERFORM TRANSLATION OR CONTINUATION COMMAND UPON OBJECT
4480

FIG. 54