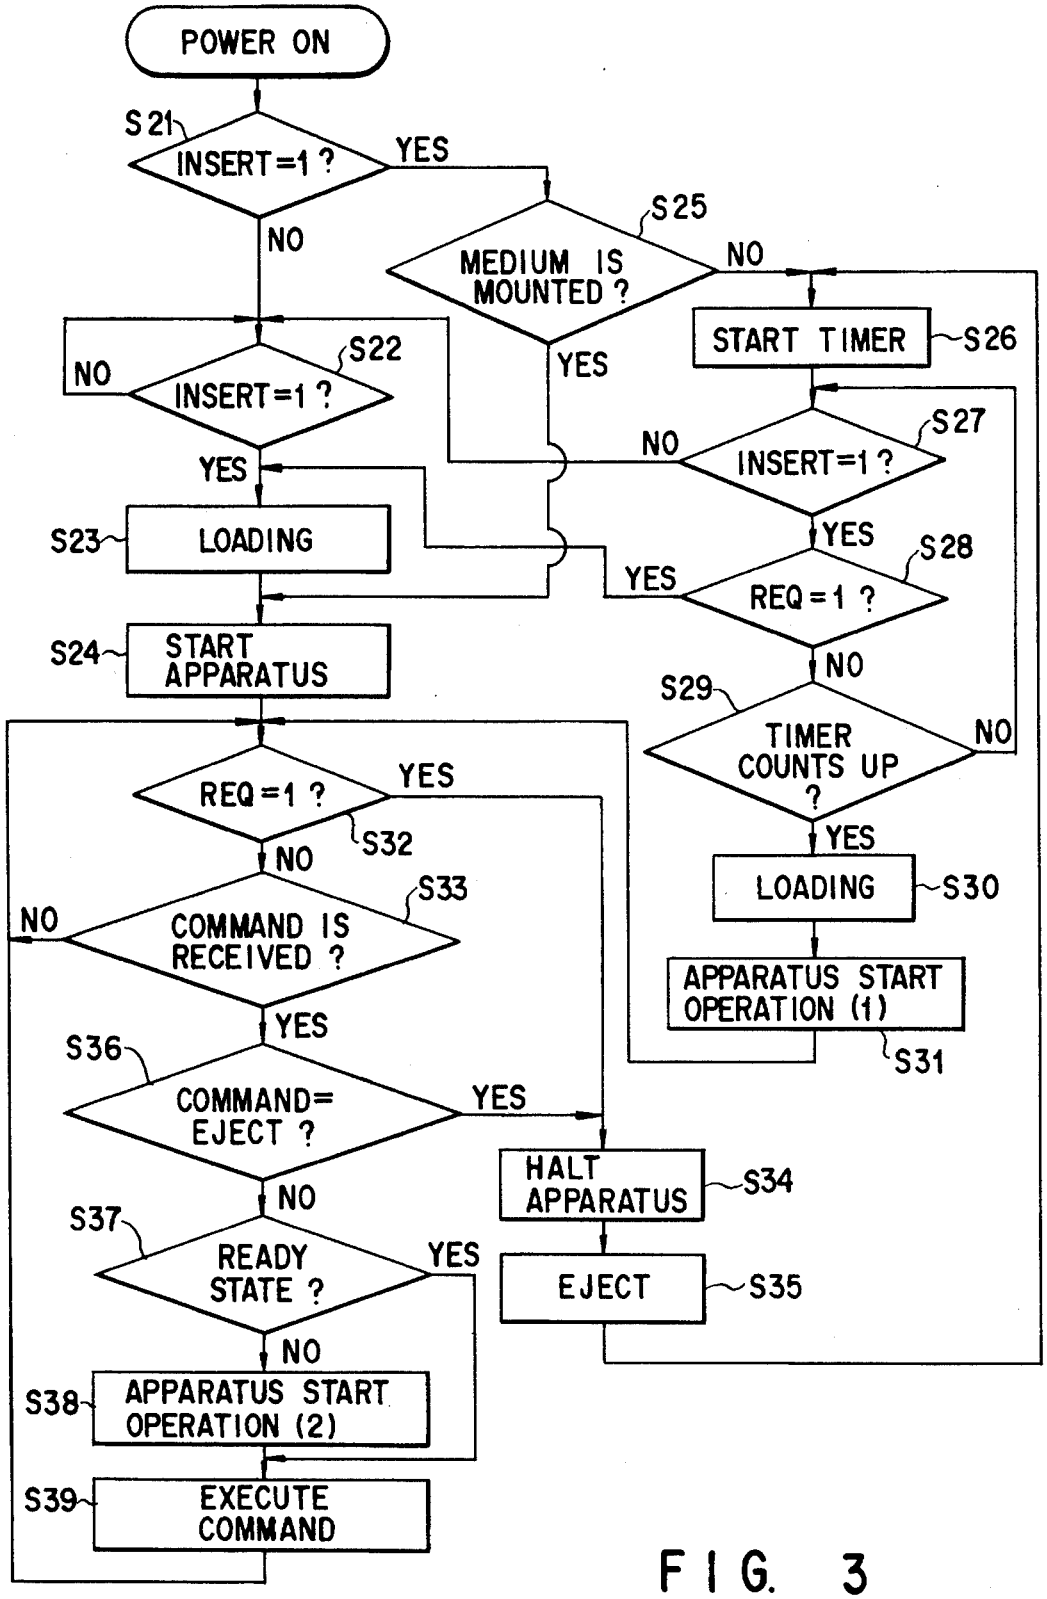
POWER ON
S21
INSERT=1 ?
YES
NO
S25
MEDIUM IS MOUNTED ?
NO
YES
START TIMER
S26
S22
NO
INSERT=1 ?
YES
S27
NO
INSERT=1 ?
YES
S23
LOADING
YES
S28
REQ=1 ?
NO
S24
START APPARATUS
S29
TIMER COUNTS UP ?
NO
YES
REQ=1 ?
YES
S32
NO
LOADING
S30
S33
NO
COMMAND IS RECEIVED ?
APPARATUS START OPERATION (1)
YES
S31
S36
COMMAND= EJECT ?
YES
HALT APPARATUS
S34
NO
S37
READY STATE ?
YES
EJECT
S35
NO
S38
APPARATUS START OPERATION (2)
S39
EXECUTE COMMAND

FIG. 3