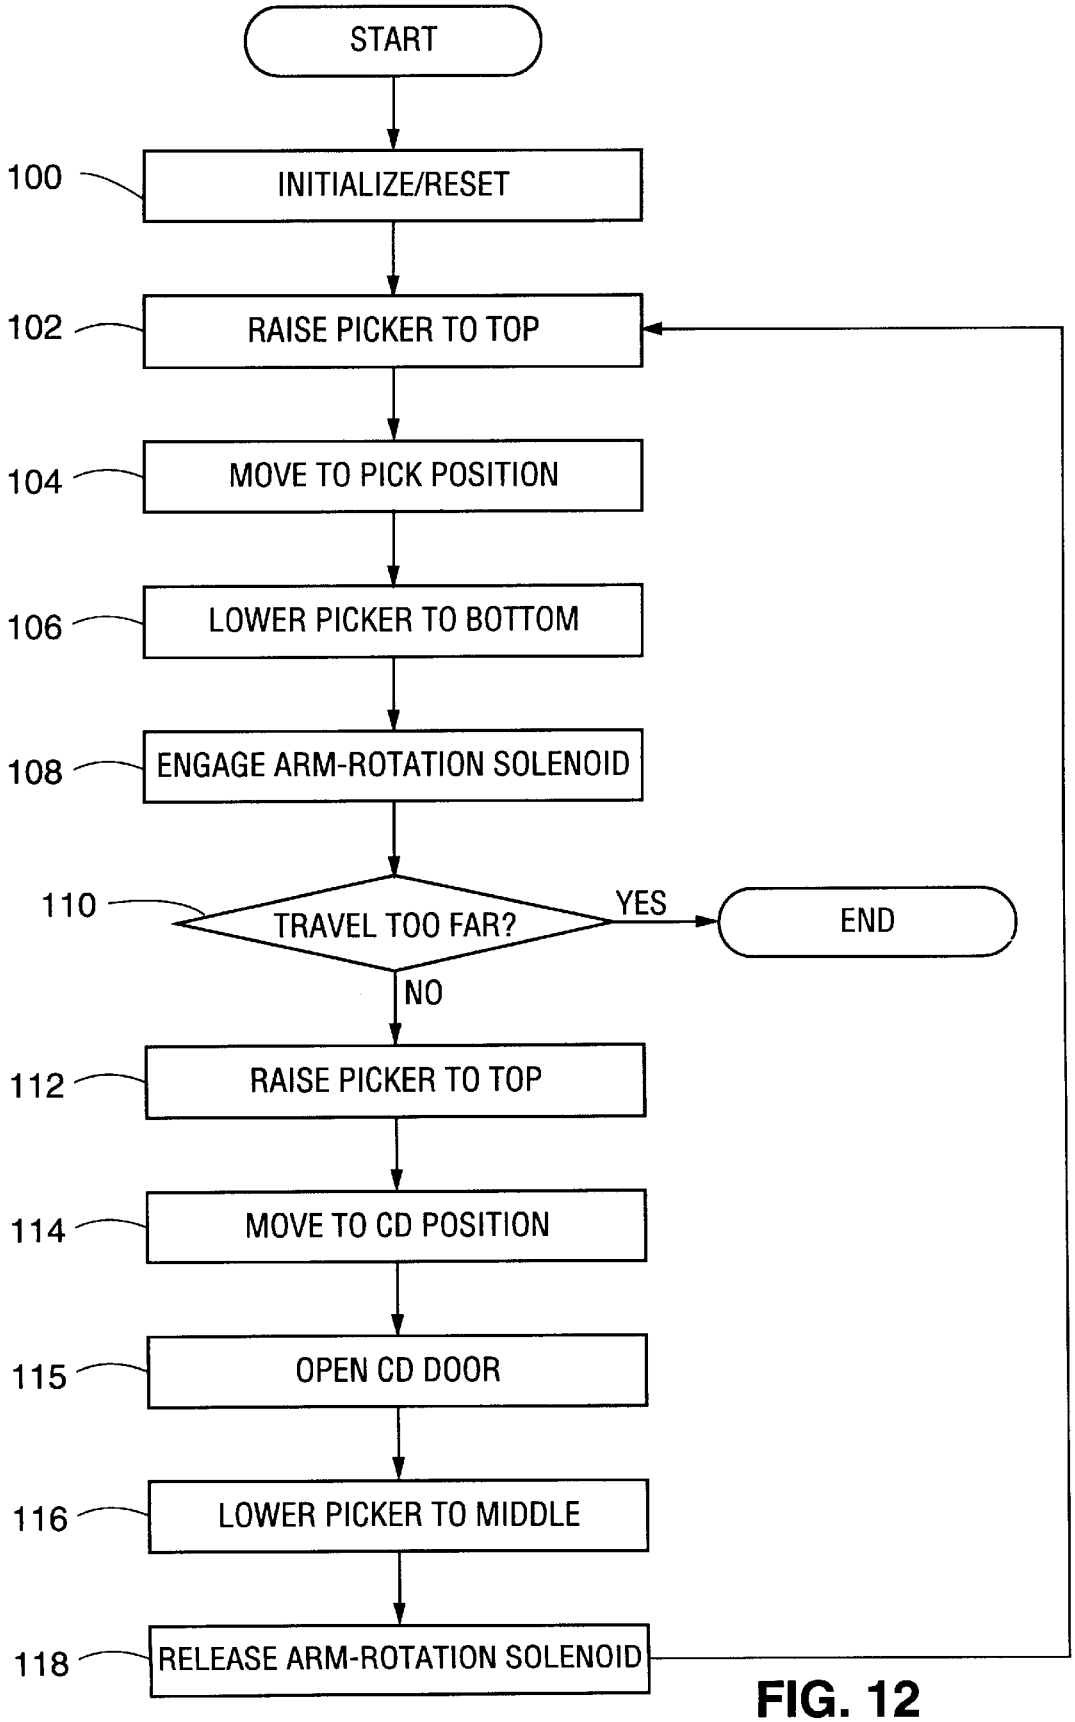
START
100
INITIALIZE/RESET
102
RAISE PICKER TO TOP
104
MOVE TO PICK POSITION
106
LOWER PICKER TO BOTTOM
108
ENGAGE ARM-ROTATION SOLENOID
110
TRAVEL TOO FAR?
YES
END
NO
112
RAISE PICKER TO TOP
114
MOVE TO CD POSITION
115
OPEN CD DOOR
116
LOWER PICKER TO MIDDLE
118
RELEASE ARM-ROTATION SOLENOID

FIG. 12