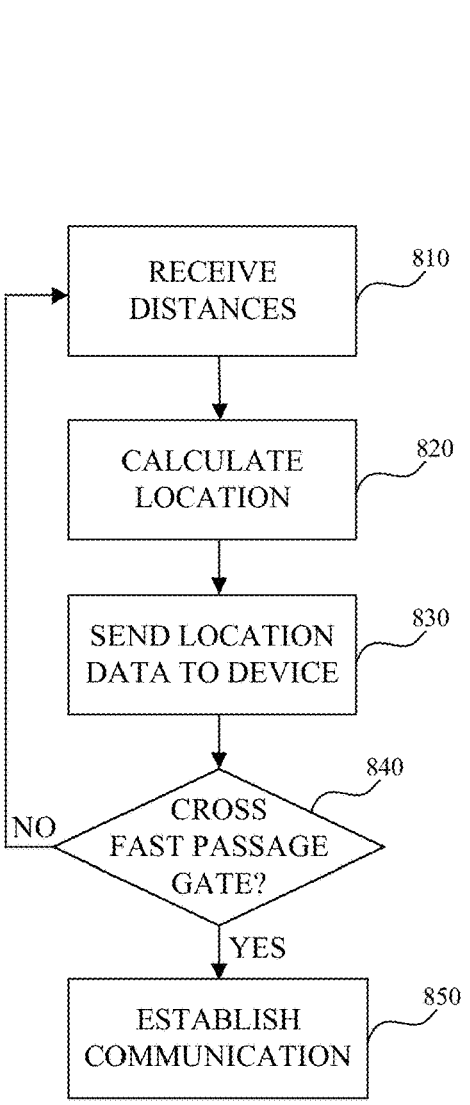
800
RECEIVE DISTANCES
810
CALCULATE LOCATION
820
SEND LOCATION DATA TO DEVICE
830
CROSS FAST PASSAGE GATE?
840
NO
YES
ESTABLISH COMMUNICATION
850

FIG. 8