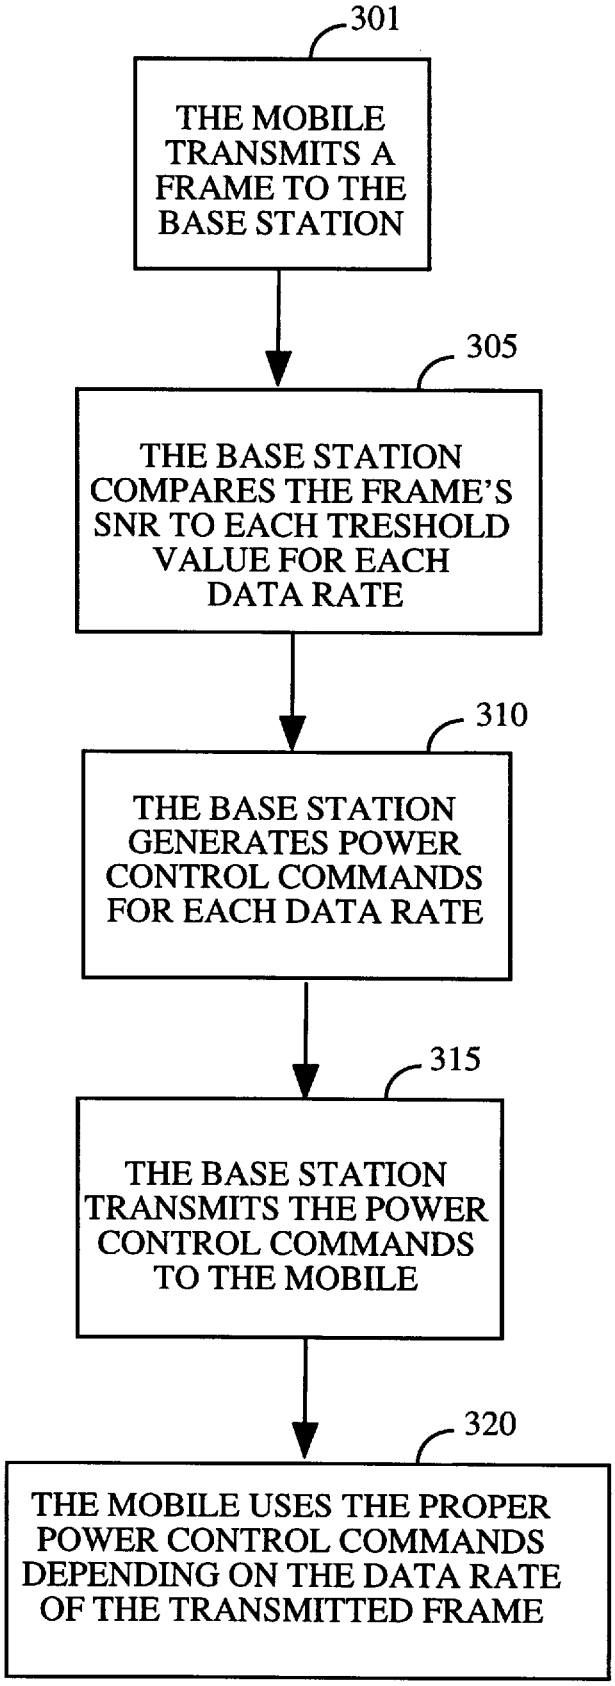
301
THE MOBILE TRANSMITS A FRAME TO THE BASE STATION
305
THE BASE STATION COMPARES THE FRAME'S SNR TO EACH TRESHOLD VALUE FOR EACH DATA RATE
310
THE BASE STATION GENERATES POWER CONTROL COMMANDS FOR EACH DATA RATE
315
THE BASE STATION TRANSMITS THE POWER CONTROL COMMANDS TO THE MOBILE
320
THE MOBILE USES THE PROPER POWER CONTROL COMMANDS DEPENDING ON THE DATA RATE OF THE TRANSMITTED FRAME

FIG. 3