FIG. 12

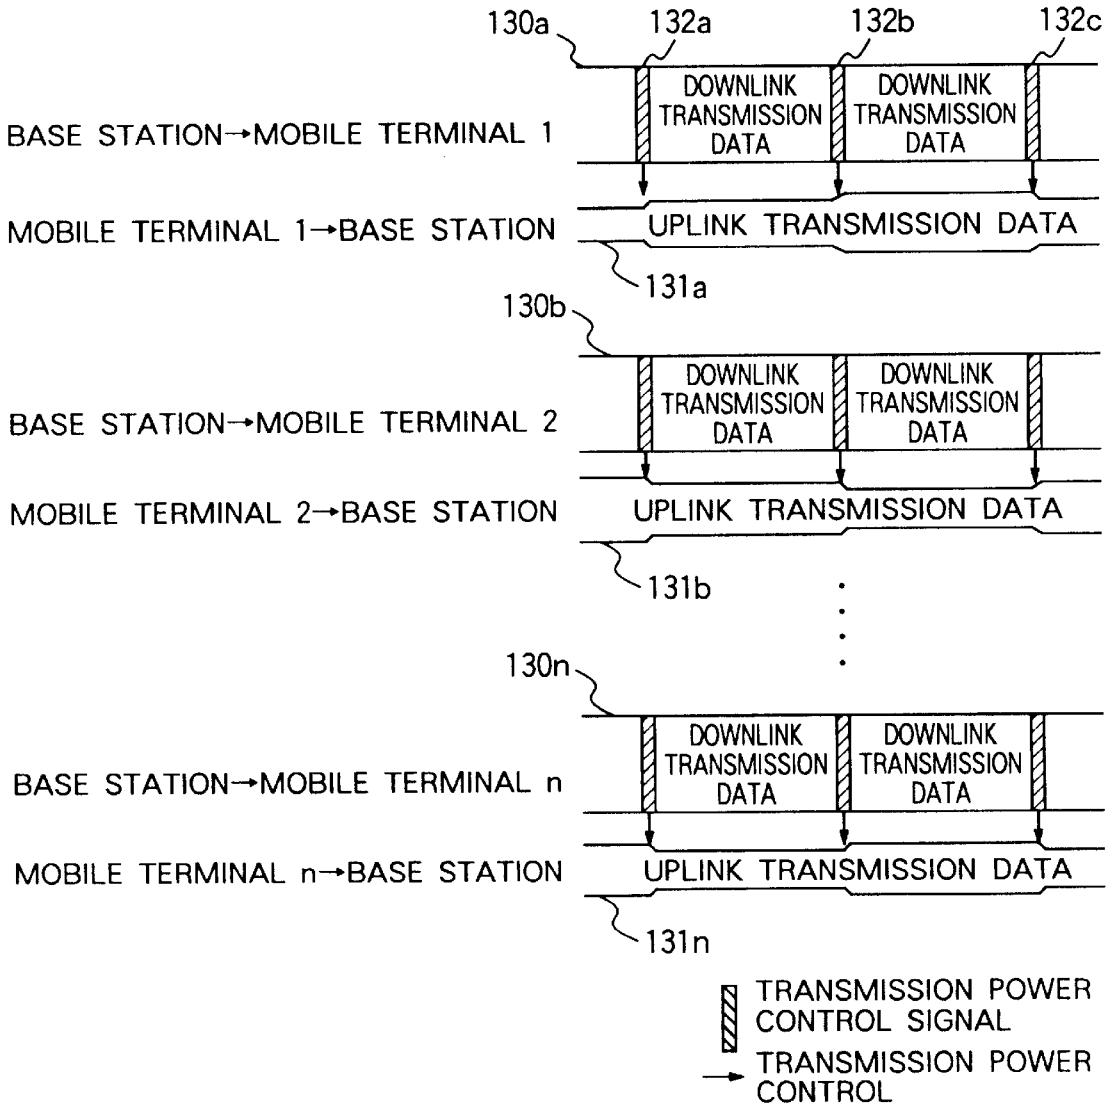
130a
132a
132b
132c
BASE STATION→MOBILE TERMINAL 1
DOWNLINK TRANSMISSION DATA
DOWNLINK TRANSMISSION DATA
MOBILE TERMINAL 1→BASE STATION
UPLINK TRANSMISSION DATA
131a
130b
BASE STATION→MOBILE TERMINAL 2
DOWNLINK TRANSMISSION DATA
DOWNLINK TRANSMISSION DATA
MOBILE TERMINAL 2→BASE STATION
UPLINK TRANSMISSION DATA
131b
130n
BASE STATION→MOBILE TERMINAL n
DOWNLINK TRANSMISSION DATA
DOWNLINK TRANSMISSION DATA
MOBILE TERMINAL n→BASE STATION
UPLINK TRANSMISSION DATA
131n
TRANSMISSION POWER CONTROL SIGNAL
TRANSMISSION POWER CONTROL