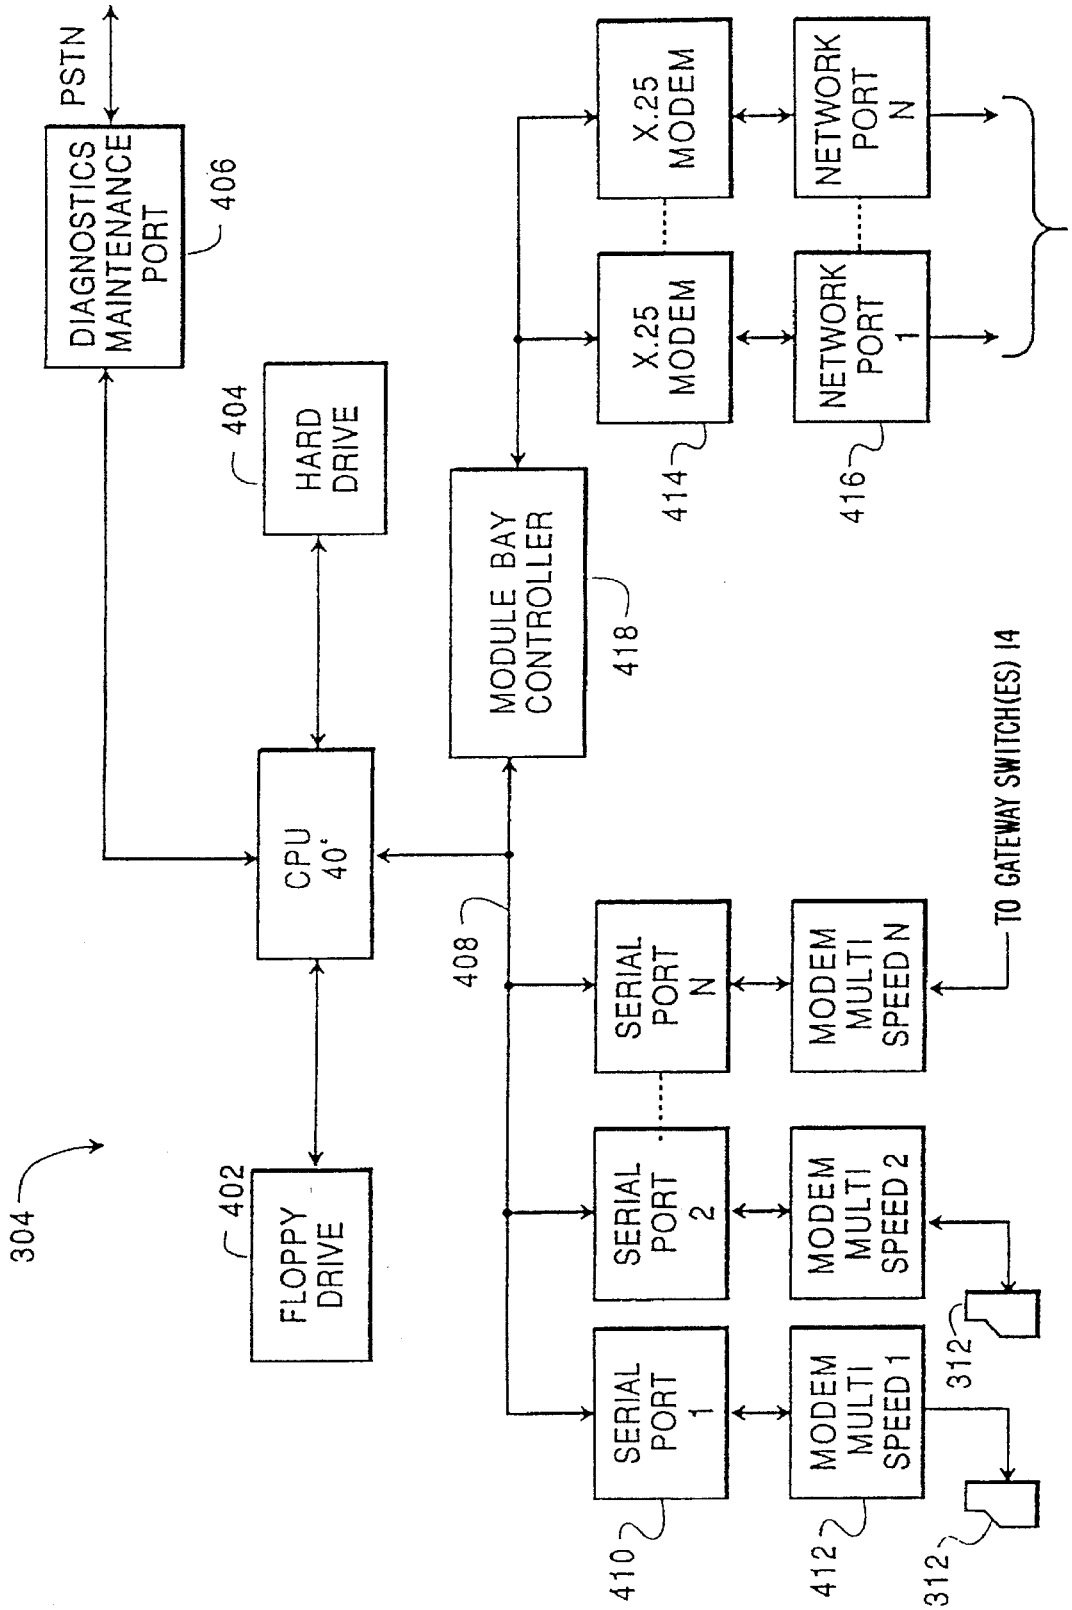
PSTN
DIAGNOSTICS MAINTENANCE PORT
406
HARD DRIVE
404
CPU 40'
FLOPPY DRIVE
402
304
MODULE BAY CONTROLLER
418
408
X.25 MODEM
X.25 MODEM
414
NETWORK PORT N
NETWORK PORT 1
416
SERIAL PORT N
SERIAL PORT 2
SERIAL PORT 1
410
MODEM MULTI SPEED N
MODEM MULTI SPEED 2
MODEM MULTI SPEED 1
412
312
312
TO GATEWAY SWITCH(ES) 14

FIG. 12